 


Theme Park Waits Wifi Configuration 1.0

 
1. Plug in the USB power cord and the Wifi setup instructions will scroll on the display.



2. Connect phone to the WifiManager_XXXXX, password is "password". This may take several minutes to appear.

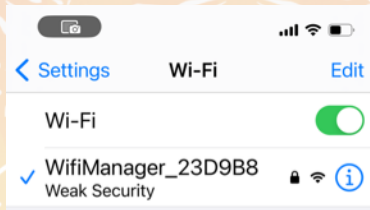

3. View page <http://192.168.4.1>

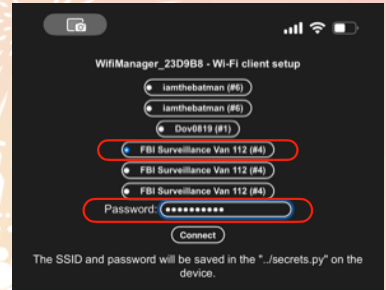


4. Select a wifi channel, type in the password, and then click on connect. The page will disappear and the box will start the configuration process.

5. In 2-4 minutes the display will start scrolling. You can then configure the settings at

<http://themeparkwaits.local>

Note: Make sure your phone is now connected to the same wifi network as the device.

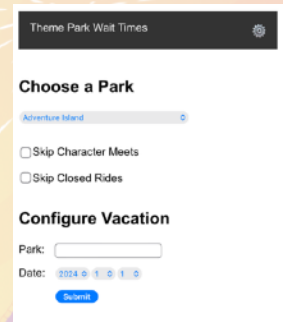

Theme Park Waits Wifi/Settings Reset

1. If the Wifi password changes OR you want to change which network, you'll need to reset the wifi config.

2. Use a small pen or screwdriver to quickly press the Reboot Button.

3. Hold down the Reset Button until the LED lights up.



4. The device is now in the original state and can be configured following the wifi instructions on the opposite side of the card.



